

Pressure Switch – Oxygen


General Specifications:

The Pressure Switch for the medical gas alarm system will incorporate a U.L. Listed single pole, double throw snap-action switch. The pressure switch will be pre-wired with six color coded leads. Normally Open or Normally Closed circuitry will be field-selected to be compatible with the medical gas alarm design. Electrical rating will be 10 amps at 120 volts AC.

The pressure switch will be tested at a pressure of 160 psi with an adjustable range of .5-80 psi and have external calibrated dials with a tamper proof cover. Factory settings will be 40 psi and 60 psi for pressure gases.

The switch enclosure will have a NEMA 4, water tight housing with a ¼" NPT bottom inlet gas service line connection and a ¾" NPT top inlet conduit connection (for electrical).

Technical Specifications:

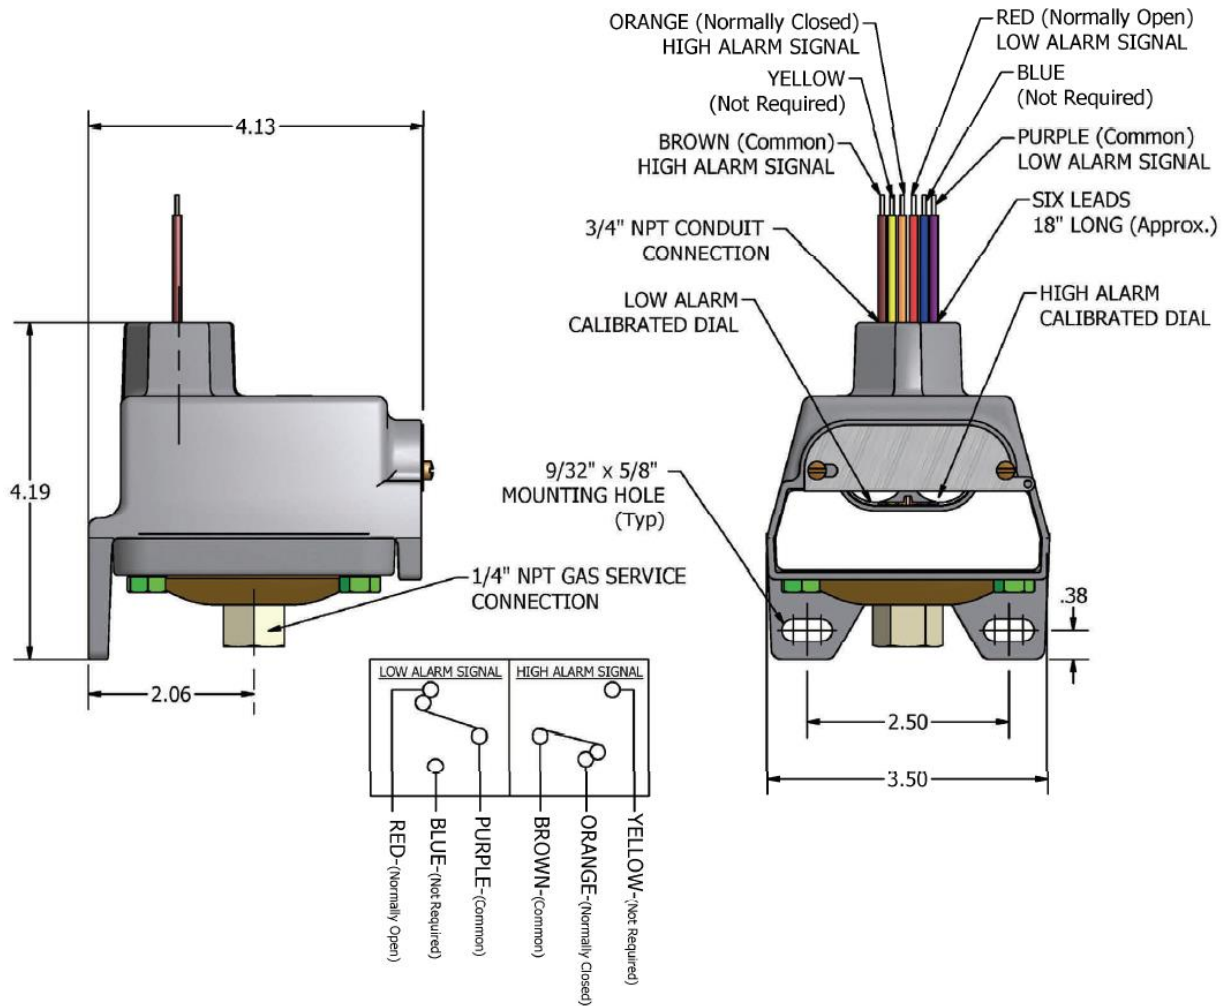

Model Numbers:

M1-PRSW-N-OXY

